

# AMX Classroom Controls

## AMX Touchpad

### Turn on System

1. Touch the AMX pad (located on top of console).
2. Press PROJECTION SYSTEM ON. Allow projector to “warm up”.
3. Select source on left side of screen.

### To Use a Laptop

1. Connect to the EXTERNAL port on the Document Camera via VGA cable
2. Select LAPTOP on AMX.

### VCR/DVD player (If Equipped)

1. Turn on player by pressing the power button.
2. Select source to control the player.

### Turn off System

1. Press “Return to Main Page” at bottom of screen.
2. Press SYSTEM OFF. This will power off everything except the computer.

## AUDIO SYSTEM

1. Turn **ON** Atlas  
(blue light lit when ON)
2. Adjust volume by rotating the knob labeled for audio source.



(NOTE: first 2 knobs should always be set to zero to avoid static noise)

### **NO COMPUTER SOUND?**

#### **Try this!**

Single click the speaker icon (lower right on PC desktop) and check the mute icon. Volume should be set to ~50%.

## Need More Support?

**Call the HelpDesk at 865-694-6537**

Please have the following information when you call:

- Room # and Building
- Equipment in Question
- Verify that all Equipment is powered on
- If you want the problem resolved during or after class

## **\*Important\***

Please **TURN OFF** the system, including projector, before leaving the room