

How to Operate Teacher Station

- 1) Turn projector ON or OFF using **BLUE** Power Button on Remote (Press **⏻** 2X to power OFF when you leave the room)



- 2) Kramer Switcher: Press labeled button to display desired source on screen



(This panel replaces the AMX system)


- 3) Volume Control:
 - Turn on Atlas (blue light lit when ON)
 - Adjust volume by rotating knob labeled for your source




(NOTE: first 2 knobs should always be set to zero to avoid static noise)

Projector Control Pads

Option 1

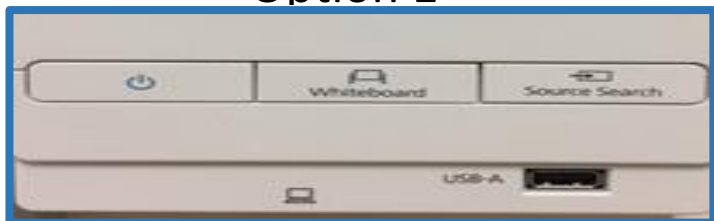

Option 2

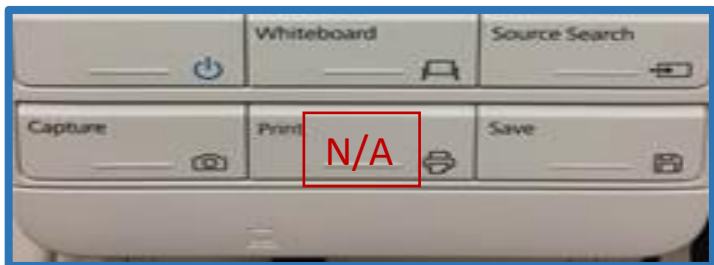

Save= Save total presentation to USB
 Capture = Save picture of Current Image to Whiteboard
 Capture and Save located in the projector touchscreen for Option 1.

How-To Turn Off Document Camera and Projector

- 1) Log Off user profile on Computer (last class of day, Shut Down Computer)
- 2) Power OFF Document Camera
 - Elmo – Push and Hold ON/OFF Button until light turns red
 - Wolf Vision – Press Power Button until light is off and use pull tab to lower arm
- 3) Power OFF Projector
 - Bright Link – Press **⏻** twice on Control Pad or Epson Remote

Power OFF Equipment as you Leave

Helpful Hints and Tips

Projector Source should be set to HDMI 1 to project Main PC or Doc Cam. Use Kramer to switch sources.



Save Image on Screen to USB



Erase Entire Page



Whiteboard
(Captured Images sent Clipboard)



Eraser Tool and Size Selector

Need More Support?

Call the HelpDesk at 865-694-6537

Please have the following information when you call:

- Room # and Building
- Equipment in Question
- Verify that all Equipment is powered on
- If you want the problem resolved during or after class